

**Demo PDF file. This file includes questions: 10 from 1425. Full version of file looks the same as demo, but full version includes all questions. You may download file with all questions by link on bottom of this page**

---

## **Q121 - Deck Safety**

### **1. What is the required minimum length of the painter for a lifeboat in ocean service?**

- two times the distance from the boat deck to the light waterline or 50 feet whichever is greater
- 60 fathoms
- the distance from the main deck to the light waterline
- twice the distance from the main deck to the light waterline or 50 feet whichever is greater

Note:

*The minimum length of a lifeboat painter in ocean service is determined by regulations requiring it to be twice the distance from the boat deck to the light waterline, or 50 feet, whichever is greater, ensuring sufficient slack for safe launching and maneuvering.*

---

### **2. What is the function of wearing rings found on some centrifugal pumps?**

- Absorb erosion of high-velocity discharge stream
- Seal pump shaft against entry of air
- Isolate the outlet side from the inlet side
- Dampen the turbulent discharge flow

Note:

*Wearing rings in centrifugal pumps isolate the high-pressure discharge side from the low-pressure suction side, minimizing internal leakage and maintaining pump efficiency. They are replaceable components designed to limit flow between these pressure zones, unlike shaft seals or flow dampeners.*

---

### **3. What prevents water running along the shaft of a leaking centrifugal pump from entering the shaft bearing?**

- Shaft seal
- Lantern ring
- Drain hole
- Water flinger

Note:

*Water flingers are discs on the pump shaft designed to deflect leaking water away from the shaft bearings, preventing it from entering. This physical deflection is the mechanism that protects the bearing from water leakage.*

---

### **4. Which of the following describes the function of the air receiver in the compressed air system on a MODU?**

- Condenses moisture.
- Provides overpressure protection.
- Purifies the air.
- Acts as an accumulator.

Note:

*The air receiver in a compressed air system functions as an accumulator, storing compressed air to smooth pressure fluctuations and provide reserve capacity. Moisture removal, air purification, and overpressure protection are handled by separate components.*

---

## 5. What is the operating principal of a flash type evaporator?

- Sea water is passed over heated plates in a thin film.
- Sea water is heated to boiling temperature under a vacuum.
- **Heated sea water is injected into a vacuum chamber.**
- Sea water is forced through a heated eductor.

Note:

*A flash evaporator operates by injecting heated seawater into a vacuum chamber, causing a portion of the water to instantly vaporize.*

---

## 6. Rotation of the steering wheel on the navigation bridge initiates oil pressure being applied to the steering gear rams by \_\_\_\_\_.

- regulating the oil flow with the six-way valve
- moving the automatic differential valve
- moving the follow up indicator which regulates the six-way valve
- **varying the angle of a tilting box or eccentricity of a floating ring**

Note:

*Steering wheel rotation initiates oil pressure to the steering gear rams by varying the angle of a tilting box or eccentricity of a floating ring, which changes the hydraulic pump's displacement and thus its output pressure.*

---

## 7. Under normal operating conditions, the rudder is hydraulically locked unless which situation occurs?

- The variable stroke pump is off stroke
- **A rudder order is given by the control system**
- An electric power system failure occurs at the steering gear
- The manual trick wheel is engaged for steering

Note:

*The rudder is hydraulically locked under normal operation unless a rudder order is issued by the control system, which releases the hydraulic pressure and allows movement.*

---

## 8. The follow-up gear on an electro-hydraulic steering gear \_\_\_\_\_.

- relieves excessive fluid pressure
- **takes the pump off stroke when the desired rudder angle is attained**
- synchronizes wheel position with the rudder position
- returns the rudder to midposition when the wheel is released

Note:

*The follow-up gear in an electro-hydraulic steering system stops the hydraulic pump when the desired rudder angle is achieved, preventing rudder over-travel. It provides feedback to compare the ordered and actual rudder angles, and its function is not pressure relief, rudder centering, or wheel/rudder synchronization.*

---

## 9. In an electro-hydraulic steering system, rudder movement is maintained in close synchronization with the steering wheel position by means of the \_\_\_\_\_.

- trick wheel
- **follow-up control**
- six-way valve
- Rapson slide

Note:

*Follow-up control synchronizes rudder and steering wheel position by using feedback to stop hydraulic motion when the desired angle is reached. This system compares the ordered rudder angle to the actual rudder angle, driving the error to zero. A trick wheel is a manual backup, a six-way valve reroutes hydraulic flow, and a Rapson slide is a mechanical linkage; none of these provide the necessary feedback for synchronization.*

---

**10. When the helm is turned on the navigation bridge, which of the listed actions will be the FIRST response in the steering room on a ship equipped with an electro-hydraulic steering gear?**

- The pumps go to full stroke.
- The six-way valve aligns itself with the running pump.
- Both port and starboard cables are energized.
- **The synchronous receiver turns, duplicating the helm motion.**

Note:

*The initial response in the steering gear room of a ship with an electro-hydraulic steering system is the synchronous receiver turning to match the helm motion on the bridge.*

---